


Toelichting thermostaat

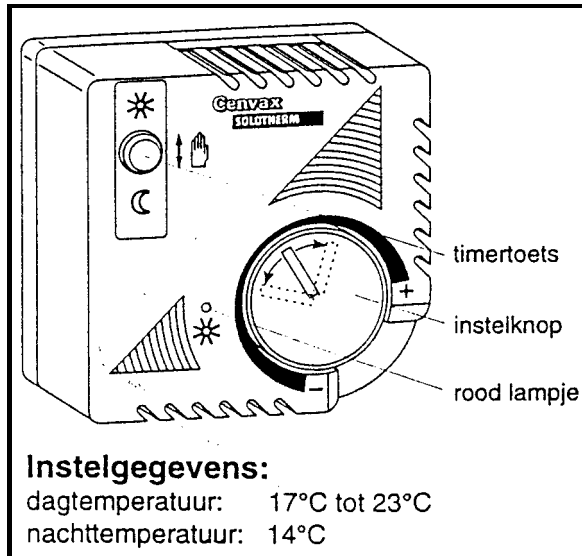

Deze ruimte is uitgerust met

Solotherm Individuele Ruimteregeling

Met behulp van de afstandsbediening (zie afbeelding) kunt u zelf de gewenste temperatuur in deze ruimte beïnvloeden.

Standaard situatie


Door middel van de aanwezigheidsdetectiesensor schakelt de ECV automatisch in dagbedrijf zodra U in de woning aanwezig bent. Dit is zichtbaar aan het rode lampje (**lampje aan = dagbedrijf**).

Als het rode lampje brandt kunt u de gewenste ruimte temperatuur instellen d.m.v. de temperatuurknop (instelbaar tussen 17°C en 23°C). Zodra U de woning verlaat zal de CV automatisch na 15 minuten naar nachtbedrijf gaan.

Bijzondere situatie

Het kan voorkomen dat U de CV "gedwongen" in dagbedrijf wilt hebben zonder dat de aanwezigheidsdetectie actief is (b.v. bij ziekte). Druk dan op de timertoets. Het rode lampje gaat knipperen = dagbedrijf, timer actief. De looptijd van de timer is 4 uur. Na deze tijd zal het automatisch programma worden geactiveerd. Ook kunt U tussentijds de timer resetten door nogmaals de timertoets in te drukken. Het rode lampje brandt nu weer continu.

Draait U niet te veel aan de instelknop ineens maar wacht rustig de instelling at.

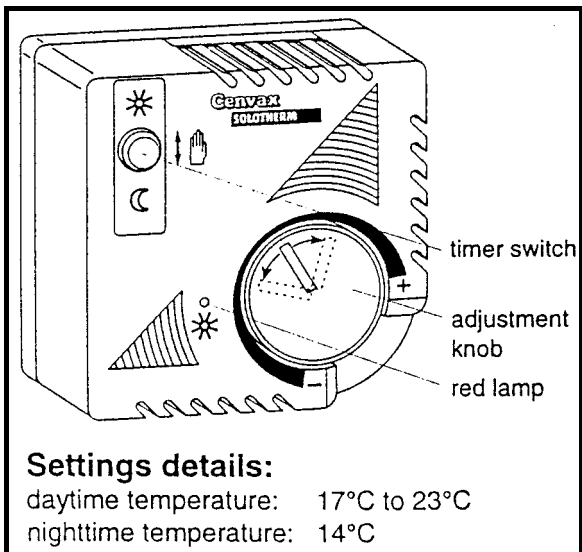

This room is fitted with a Solotherm Individual Room Controlunit.

You can influence the required temperature in this room using this unit (see illustration).

Standard situation

The presence detector enables the central heating to automatically switch to daytime operation as soon as it detects presence in the house. This is indicated by the red light (**light on = daytime operation**). If the red light is on, you can set the required room temperature with the temperature adjustment knob (adjustable between 17°C and 23°C). The central heating will automatically switch to nighttime operation fifteen minutes after you leave the house.

Special situations

You may want (e.g. in the case of illness) to "set" the central heating to daytime operation, without the presence detector being active. To do so, press the timer switch. The red light will flash = daytime operation, timer active. The timer will run for 4 hours. After this period the automatic program will be activated again. You can also deactivate the timer by pressing the switch again. The red light will stay on.

Do not turn the adjustment knob too much at once but wait patiently for the adjustment to take effect.